




**Step 1:** Remove any existing troffer (recessed fluorescent fixture) door or lens.

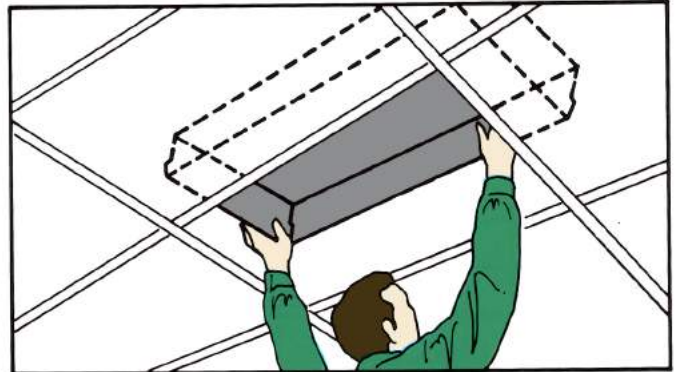

**Step 2:** Lift troffer slightly and move to one side. No electrical disconnect is needed.

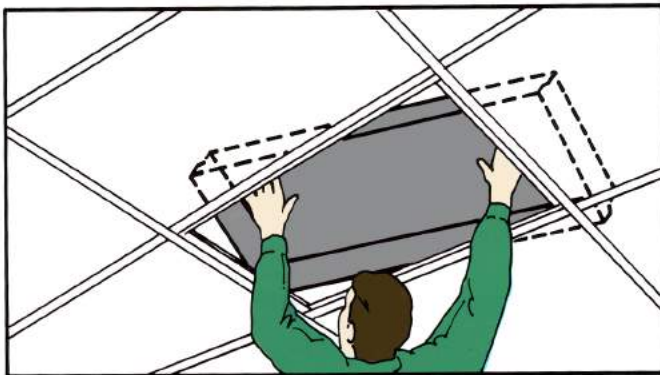

**Step 3:** Drop in retrofit frame unit and re-seat troffer on top of new frame unit.

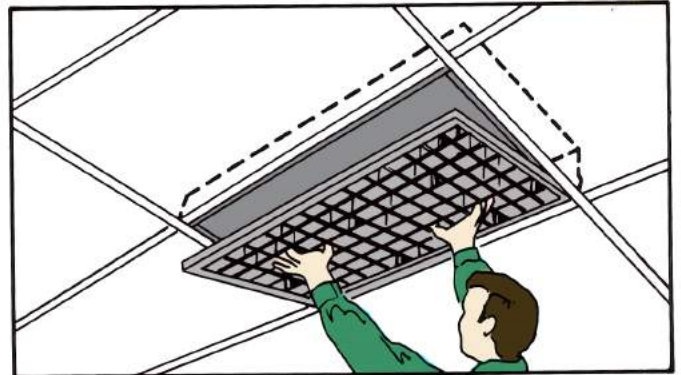

**Step 4:** Hang new retrofit door frame from either side of troffer. Close the door by clicking the latches into place and you're set!